


# How to install the 3 phase track light



## How to install the 3 phase track light?

3 phase track

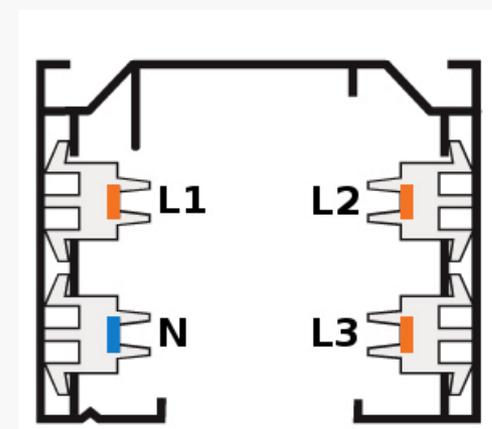

# How to install the 3 phase track light



Step

Null line

Earth wire

Track fixture




Track top

Switch knob




# How to install the 3 phase track light

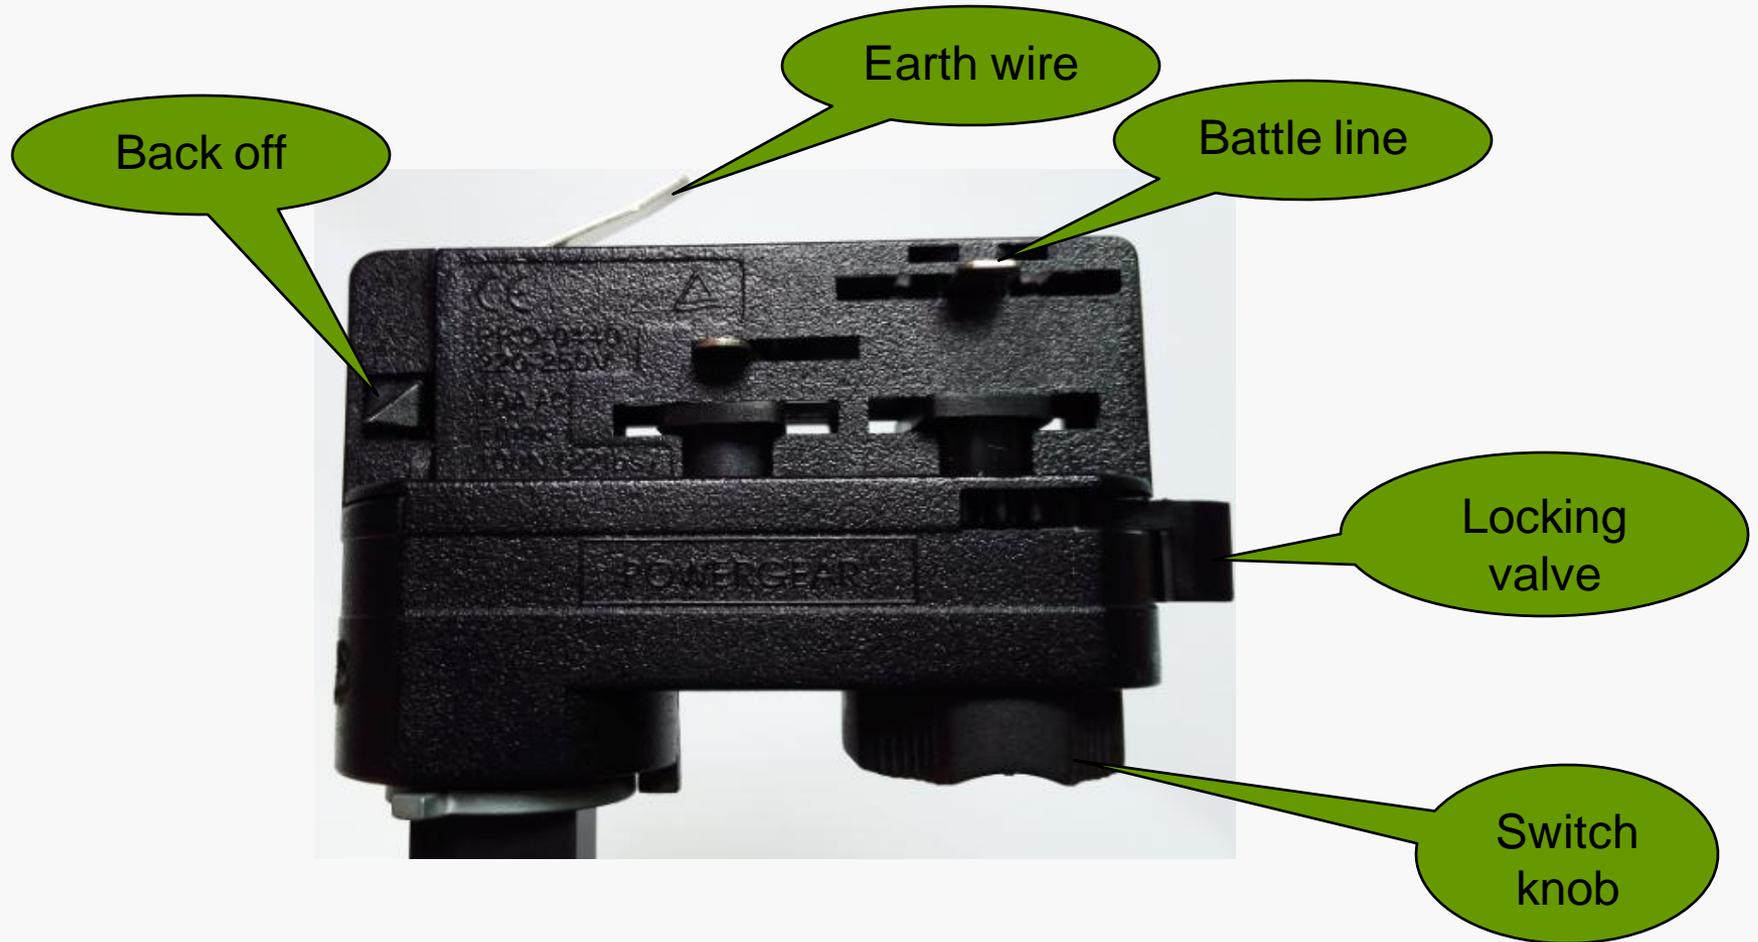

# How to install the 3 phase track light

## Installation and illustrations


1. Turn switch knob to off,
2. Pull the locking valve to one side with an angle of 90degree,
3. Embed track top into the groove of track stick,  
Make sure the step and the track fixture are at the same direction,  
During assembling and disassembling, put it in at an angle of 45degree first and then keep it horizontal,
4. Turn the locking valve to the parallel with track top,
- 5, adjust the switch knob to an appropriate gear,
- 6, power on, turn the switch knob till the track light works, that all

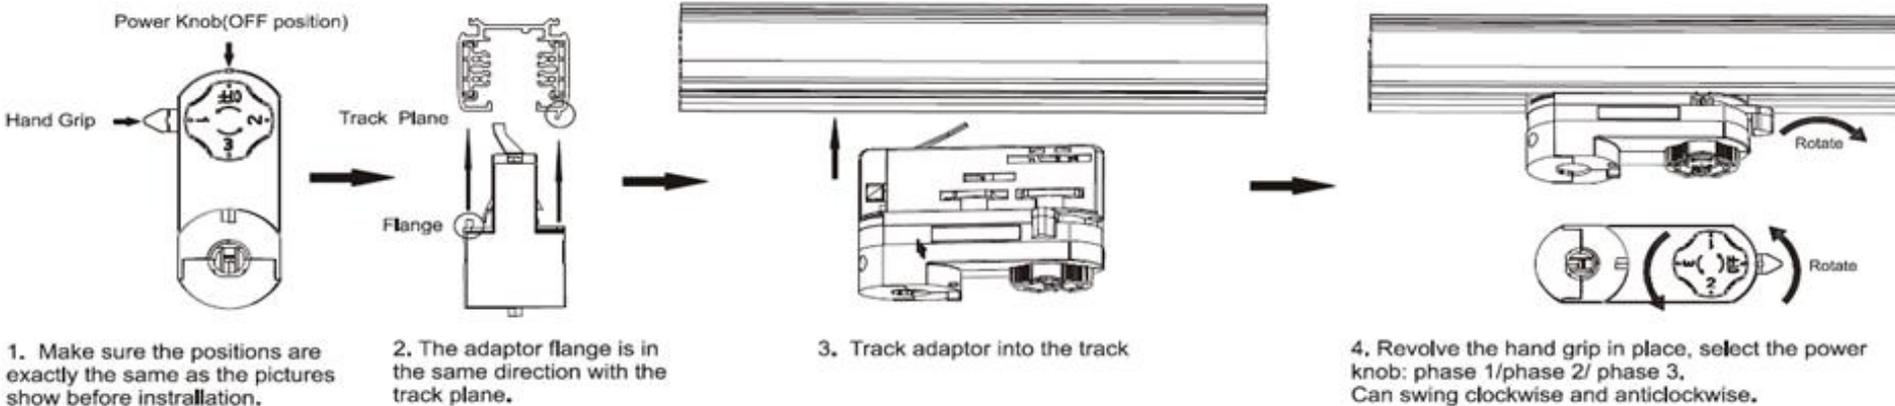

# How to install the 3 phase track light

## Disassemble and illustrations

1. Turn switch knob to off,
2. Pull the locking valve back,
3. Pull the track adaptor out of the groove of track stick,  
Make sure the step and the track fixture are at the same direction,  
During disassembling, put it in at an angle of 45degree
4. Take away the track light from the track systems.

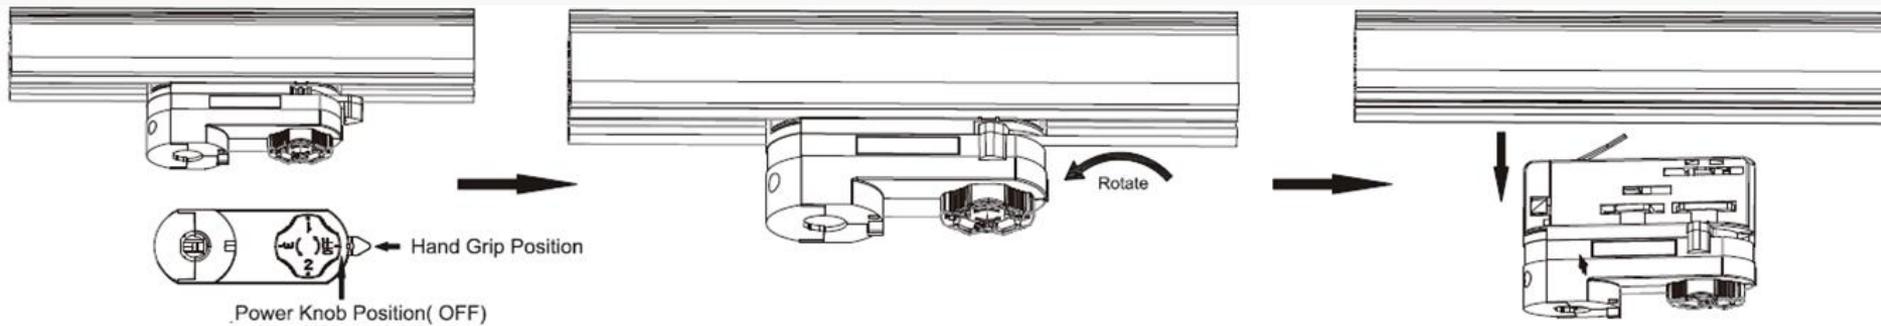

1. Make sure the track adaptor's positions are the same as the picture shows before removing.

2. When power knob at the "OFF" position, rotate the hand grip at 90 degree.

3. Remove the track adaptor.

# How to install the 3 phase track light

## Attention

Before install

Before remove

NOT ALLOWED to rotate the power knob

OK to rotate the power knob

NOT ALLOWED to rotate the hand grip

OK to rotate the hand grip

Hand Grip Position

Hand Grip Position

Power knob in position  
( phase 1/phase 2/phase 3),  
rotate the hand grip.

Power knob  
position(OFF)

In this case it's not allowed to rotate the power knob.

Can rotate the power knob  
when it's the above positions situation.

Not allowed to rotate the hand grip  
when it's above positions situation.

Only when the power knob is in the above position  
then rotate the hand grip.

# How to install the 3 phase track light



## The End

### Thank you

### Welcome to visit our factory

Add: 3F Bldg3, Landwind Industrial Zone, Tangtou Avenue,  
Shiyan Town, Bao'an District, Shenzhen, China. 518108

Tel: 0086-755-29681895

Web: [www.ledxh.cn](http://www.ledxh.cn)

Fax: 0086-755-29681896

Email: [support@ledxh.cn](mailto:support@ledxh.cn)